

MOST OFTEN REQUESTED REPLACEMENT PARTS

JMX SERIES

MODELS:

JMX-100 · JMX-102 · JMX-150 · JMX-152 · JMX-450 · JMX-452
 JMX-141 · JMX-144 · JMX-146XP · JMX-441 · JMX-444 · JMX-446XP



DESCRIPTION	PART #
Actuator, PTT, rubber	25800500
Actuator, TACT	25800600
Bushing, Antenna, threaded	25400600
Contact, Antenna PCB mount	25500700
Door, Battery, plastic, 2-pc	13578000
Speaker, Grill Cloth	25603300
Jack, 2.5mm, Ant-Chgr	02100001
Jack, Stereo, 3.5mm Panel Mount	02100053
Jack Plug, Dual, Rubber	25603400
Jack, Stereo, Gold .75 Micron	02100359
Latch, Battery Door	13588000
Manual, User	01451195
Manual, Maint/Repair, JMX-102	JMX-MRM-102
Manual, Maint/Repair, JMX-141/146XP	JMX141_146XP-MRM-e
Manual, Maint/Repair, SST/JMX	SST-MRM
Microphone, Electret Miniature	05500037
Nut, 2.5mm jack	02802026
Nut, 3.5mm jack	02802027

DESCRIPTION	PART #
Shim, Battery	25601600
Spacer, Mic Foam	25603900
Switch, SPST, Momentary	05100042
Mini PC 260GM	
Speaker, 45mm, low profile, 1W	05500045

Battery Door with Hinge, Kit	RK-JMXDoorWH
Includes:	
Door, Battery	13578000
Shim, Battery	25601600
Hinge, Battery Door	25606200
Hinge Retainer	25016400
Label	14290002
Latch, Battery Door	13588000
Instruction sheet	14670010

Housing Kit	RK-SST-JMXII
Includes:	
Case, Bottom 2-pc	13564000
Door, Battery	13578000
Latch, Battery Door	13588000
Label	14290002
Connector, Cable Assembly	2142D021
Hinge Retainer	25106400
Contact, Spring	25400800
Contact, Battery	25400900
Battery Shim	25601600
Spacer, PCB	25604800
Hinge, Battery Door	25606200
Screws	28112401

Housing, JMX-100*	RK-JMX-100-CASE
Includes:	
Enclosure, Yellow	13540000
Case Bottom, Yellow	13544000
Retainer, PTT	25202200
Antenna Bushing	25400600
Foam Support, PCB	25603200
Speaker, Grill Cloth	25603300
Dual Jack Plug	25603400
Actuator Switch, PTT	25800700
Actuator Switch, TACT	25800600
Battery Insulator	25300600
Battery Shim	25601600
Battery Foam Support	25603100
Labels, Screws, Nuts	

Housing, JMX-102*	RK-JMX-102-CASE
Includes:	
Case	13250000
Bottom, Case	13564000
Case, w/Inserts Display	13250010
Battery Door	13578000
Latch, Battery Door	13588000
Retainer, Battery Door	25106400
Antenna Bushing	25400600
Speaker, Grill Cloth	25603300
Hinge, Battery Door	25606200
Dual Jack Plug	25603400

* For other parts not listed call 1-800-872-1872 or fax to 800-251-7329

Questions? Email your technical questions to tech@ritron.com. A Ritron technician will respond within 24 hours

MOST OFTEN REQUESTED REPLACEMENT PARTS

DESCRIPTION	PART #	DESCRIPTION	PART #
Actuator Switch, PTT	25800700	Battery Shim	25601600
Actuator Switch, TACT	25800600	Battery Foam Support	25603100
Battery Insulator	25300600	Retainer, PTT	25201500
Battery Shim	25601600	Case, Labels, Screws, Nuts	13250010
Battery Foam Support	25603100		
Connector Cable Assembly	2142D021	Housing, JMX-452*	RK-JMX-452-CASE
Contact, Battery Spring	25400800	Includes:	
Battery Contact (Polarized)	25400900	Case, Gray	13250000
Labels, Screws, Nuts		Bottom	13564000
		Battery Door	13578000
Housing, JMX-150*	RK-JMX-150-CASE	Latch, Battery Door	13588000
Includes:		Antenna Bushing	25400600
Case	13250000	Speaker, Grill Cover	25603300
Bottom, Case	13324000	Dual Jack Plug	25603400
Antenna Bushing	25400600	PCB Support	25604800
PCB, Foam Support	25603200	Battery Insulator	25300600
Dual Jack Plug	25603400	Hinge, Battery Door	25606200
Actuator Switch, PTT	25800500	Actuator, PTT	25800500
Actuator, TACT	25800600	Actuator, TACT	25800600
Battery Insulator	25300600	Battery Insulator	25300600
Battery Shim	25601600	Battery Shim	25601600
Battery Support	25603100	Retainer, PTT	25201500
Retainer, PTT	25201500	Hinge, Retainer Battery Door	25106400
Case w/inserts Display	13250010	Spring Contact Battery	25400800
Labels, Screws, Nuts		Battery Contact	25400900
		Case, Labels, Screws, Nuts	13250010
Housing, JMX-152*	RK-JMX-152-CASE		
Includes:		Speaker repair kit w/leads	Rk-XSPK1
Case	13250000	Resistor, 3.3 ohm 5% 1/4W cf	04700102
Bottom, Case	13564000	Speaker, low profile 36mm	05500031
Case, w/Inserts	13250010	Speaker, Mylar, 8 ohm .5W	05500036
Battery Door	13578000	Wire, #28 AWG, Black	06001021
Latch, Battery Door	13588000	Wire, #28 AWG, Red	01454963
Retainer, Battery Door	25106400	Instruction Sheet	14380001
Antenna Bushing	25400600	Spacer, Speaker	25603600
Speaker, Grill Cloth	25603300	Spacer	25602900
Hinge, Battery Door	25606200		
Dual Jack Plug	25603400	Battery, 700 mA AH Ni-Cd	BPJ-6N
Actuator Switch, PTT	25800700	Battery, 700 mA AH Ni-Cd	BPJS-6N
Actuator, TACT	25800600	Charger, Wall	BC-A
Battery Insulator	25300600	Belt Clip	CBS-A
Battery Shim	25601600		
Battery Support	25606000		
Retainer, PTT	25201500		
Contact, Battery Spring	25400800		
Battery Contact (Polarized)	25400900		
Labels, Screws, Nuts			
Housing, JMX-450*	RK-JMX-450-CASE		
Includes:			
Case, Gray	13250000		
Bottom, Gray	13254000		
Antenna Bushing	25400600		
PCB Foam Support	25603200		
Speaker, Grill Cover	25603300		
Dual Jack Plug	25603400		
Actuator, PTT	25800500		
Actuator, TACT	25800600		
Battery Insulator	25300600		

* For other parts not listed call 1-800-872-1872 or fax to 800-251-7329

Questions? Email your technical questions to tech@ritron.com. A Ritron technician will respond within 24 hours